

# ***Rapidlogger Systems***


## **Rapidlogger System Main Unit Fuse**

This tech note describes how to trouble shoot issues with power input to the Rapidlogger System's.




This tech note applies to both the Standard and the Small Rapidlogger Units.

Open the Lid to the Rapidlogger Unit. Turn on the Power to the unit.

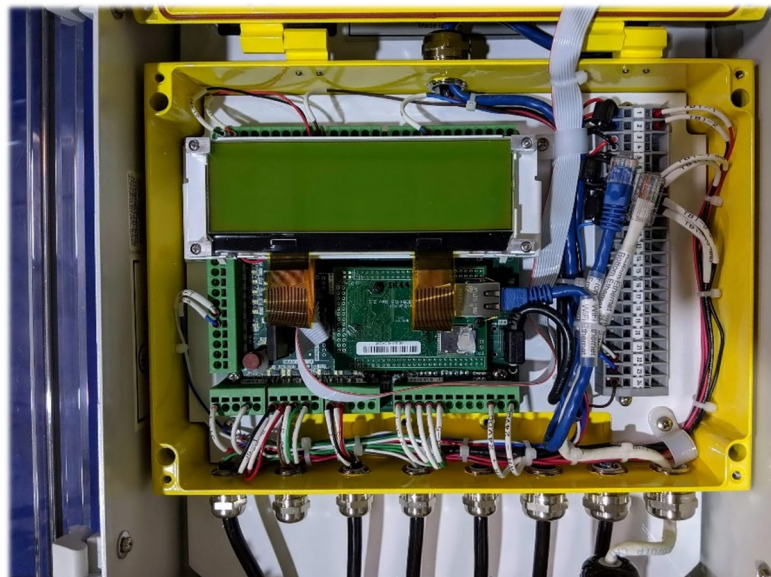

# ***Rapidlogger Systems***

Look inside if there are many LEDs lit up then there is power coming in to the unit. If there is only one LED (LED 1) lit and all others are dark then the red colored fuse is blown. You can identify the LED 1 circled in the image below.

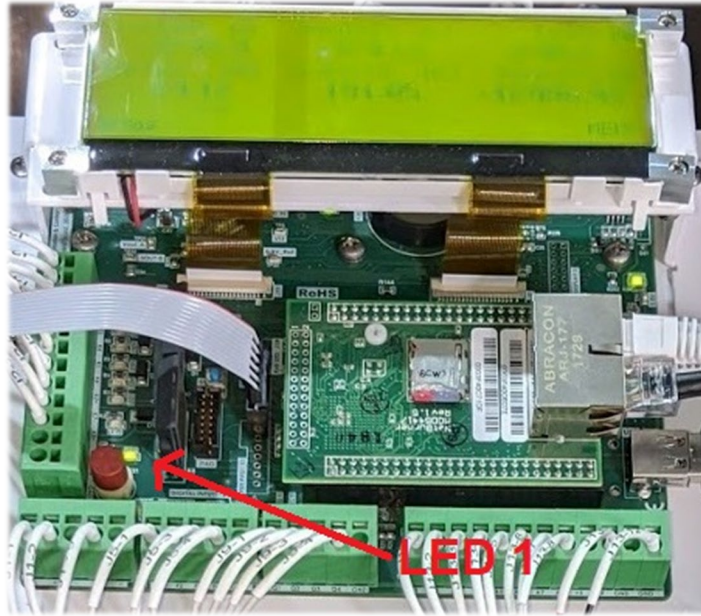

If this LED (LED1) is not lit up then there is no power being supplied to the unit and the power supply may have a problem.

## **Replacement Fuse**

The part number for a replacement fuse is below

Manufacturer: Littlefuse

Part Number: **37411000410**

Alternate Manufacturer: Bel Fuse Inc

Part Number: **0691-1000-01**

Rating: 1Amp (500mA can also be used)

Suppliers: Mouser.com, Digikey.com, Newark.com, rs-online.com